

## Factory Connect Camera System: Honda Civic

All Models without Navigation

Remove lower dash panel and unplug switches.



Remove instrument cluster panel and unplug hazard switch.



Remove 3 Phillips screws attaching upper visor trim panel.




Remove upper dash visor trim panel.



Remove 5 Phillips screws that attach multi-media screen to vehicle.

Note: See inset photo for top screw locations.

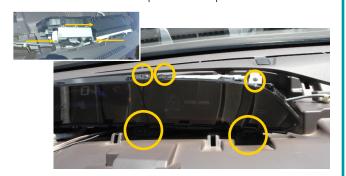

Remove 3 plugs from rear of multi-media screen. Plug in Factory Connect T-Harness into screen and reconnect all plugs. Route RCA and reverse trigger wire down to drivers kick panel.






## **Factory Connect Camera System:**

**Honda Civic** 

All Models without Navigation

Connect harness trigger wire (Red) and camera power wire (Red) to vehicle reverse wire (Brown/Silver Dot). Ground Black wire.

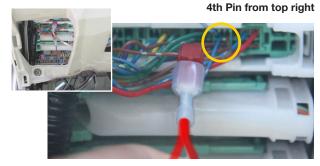

8 Route camera cable to trunk area. Remove 10mm bolt securing trunk lip bezel. Pull bezel to release 4 retaining clips.



Use foam gasket to determine camera 9 mounting location on the drivers side. Drill a 19mm hole, mount camera & secure with nut.



10 Unclip license plate light and route camera cable through opening. Remount light and re-attach trunk lip bezel.



11 Connect the 2 wires located next to camera connector plug, Green (Parking Lines) and White (Image Flip) to corresponding color wires. Connect the camera cable.



12 Check installation by putting vehicle in reverse to make sure image is correct and factory (yellow) parking lines are on the multi-media screen. Reassemble all parts of the vehicles to complete installation.



15500 Lightwave Drive, Suite 202 Clearwater, Florida 33760

Woolmer Way, Bordon, Hampshire, GU35 9QE, United Kingdom

EchoMaster is a Power Brand of AAMP Global

EchoMaster.com