


# CANopener™ FLASH

## Quick Start Guide

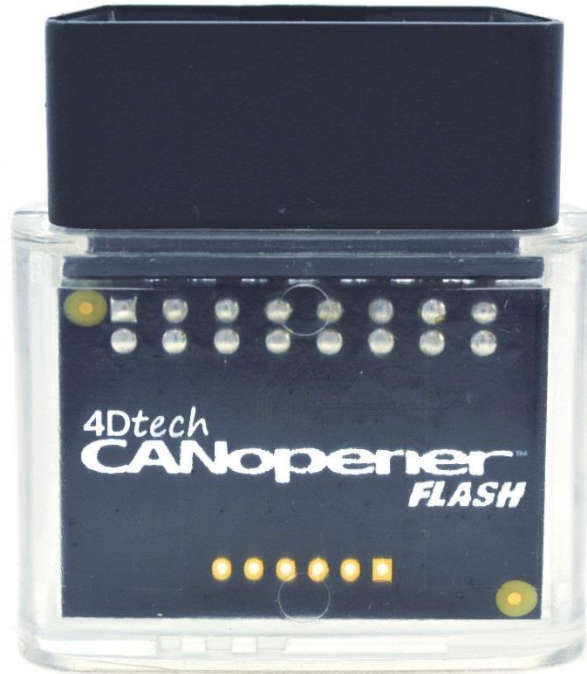

### STEP 1


#### INSERT

Insert the CANopener Flash into the vehicles OBD-II (On Board Diagnostics) port. It will be located below the steering wheel, typically at the bottom edge of the dashboard.

### STEP 2

#### REMOVE

The CANopener Flash will blink BLUE while programming and then turn GREEN or RED to indicate success or failure. Once the light turns GREEN, you can unplug it from the OBD-II port.

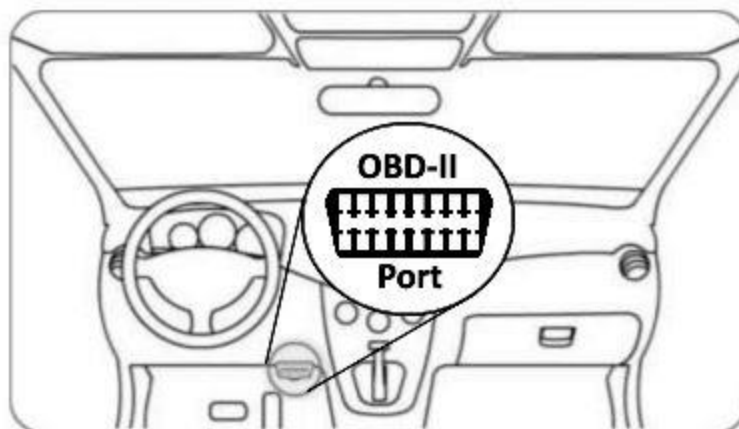

The FULL manual can be found on the product page of our website at [www.4dtech.com](http://www.4dtech.com)